

## **Digital Switch Setup (DX9 and lower) vs. Analog Switch Setup (DX18xx)**

The DIGITAL switch setup is for toggles, momentary buttons, and Flight Mode (DX9 & lower, depending on Tx model).

The ANALOG switch setup is for things like sticks, knob, sliders (DX18xx Tx models).

Andy Kunz