## Make Voices on DX6, DX7, DX9, DX18 Louder by Andy Kunz

There are two volume adjustments. One on the front screen (defaults to 50) and one on the System Setup screens (defaults to 50).  $50\% \times 50\% = 25\%$  - so if you want it louder, adjust them both.

Andy

Ref: #31458