

roll this down fuselage before gluing to a U-form


3 mm depron

3mm depron

deck and down side fuselage skin starts 8 cm from end

2x 3mm depron

6mm depron canopy form
for heats shrink sleeve

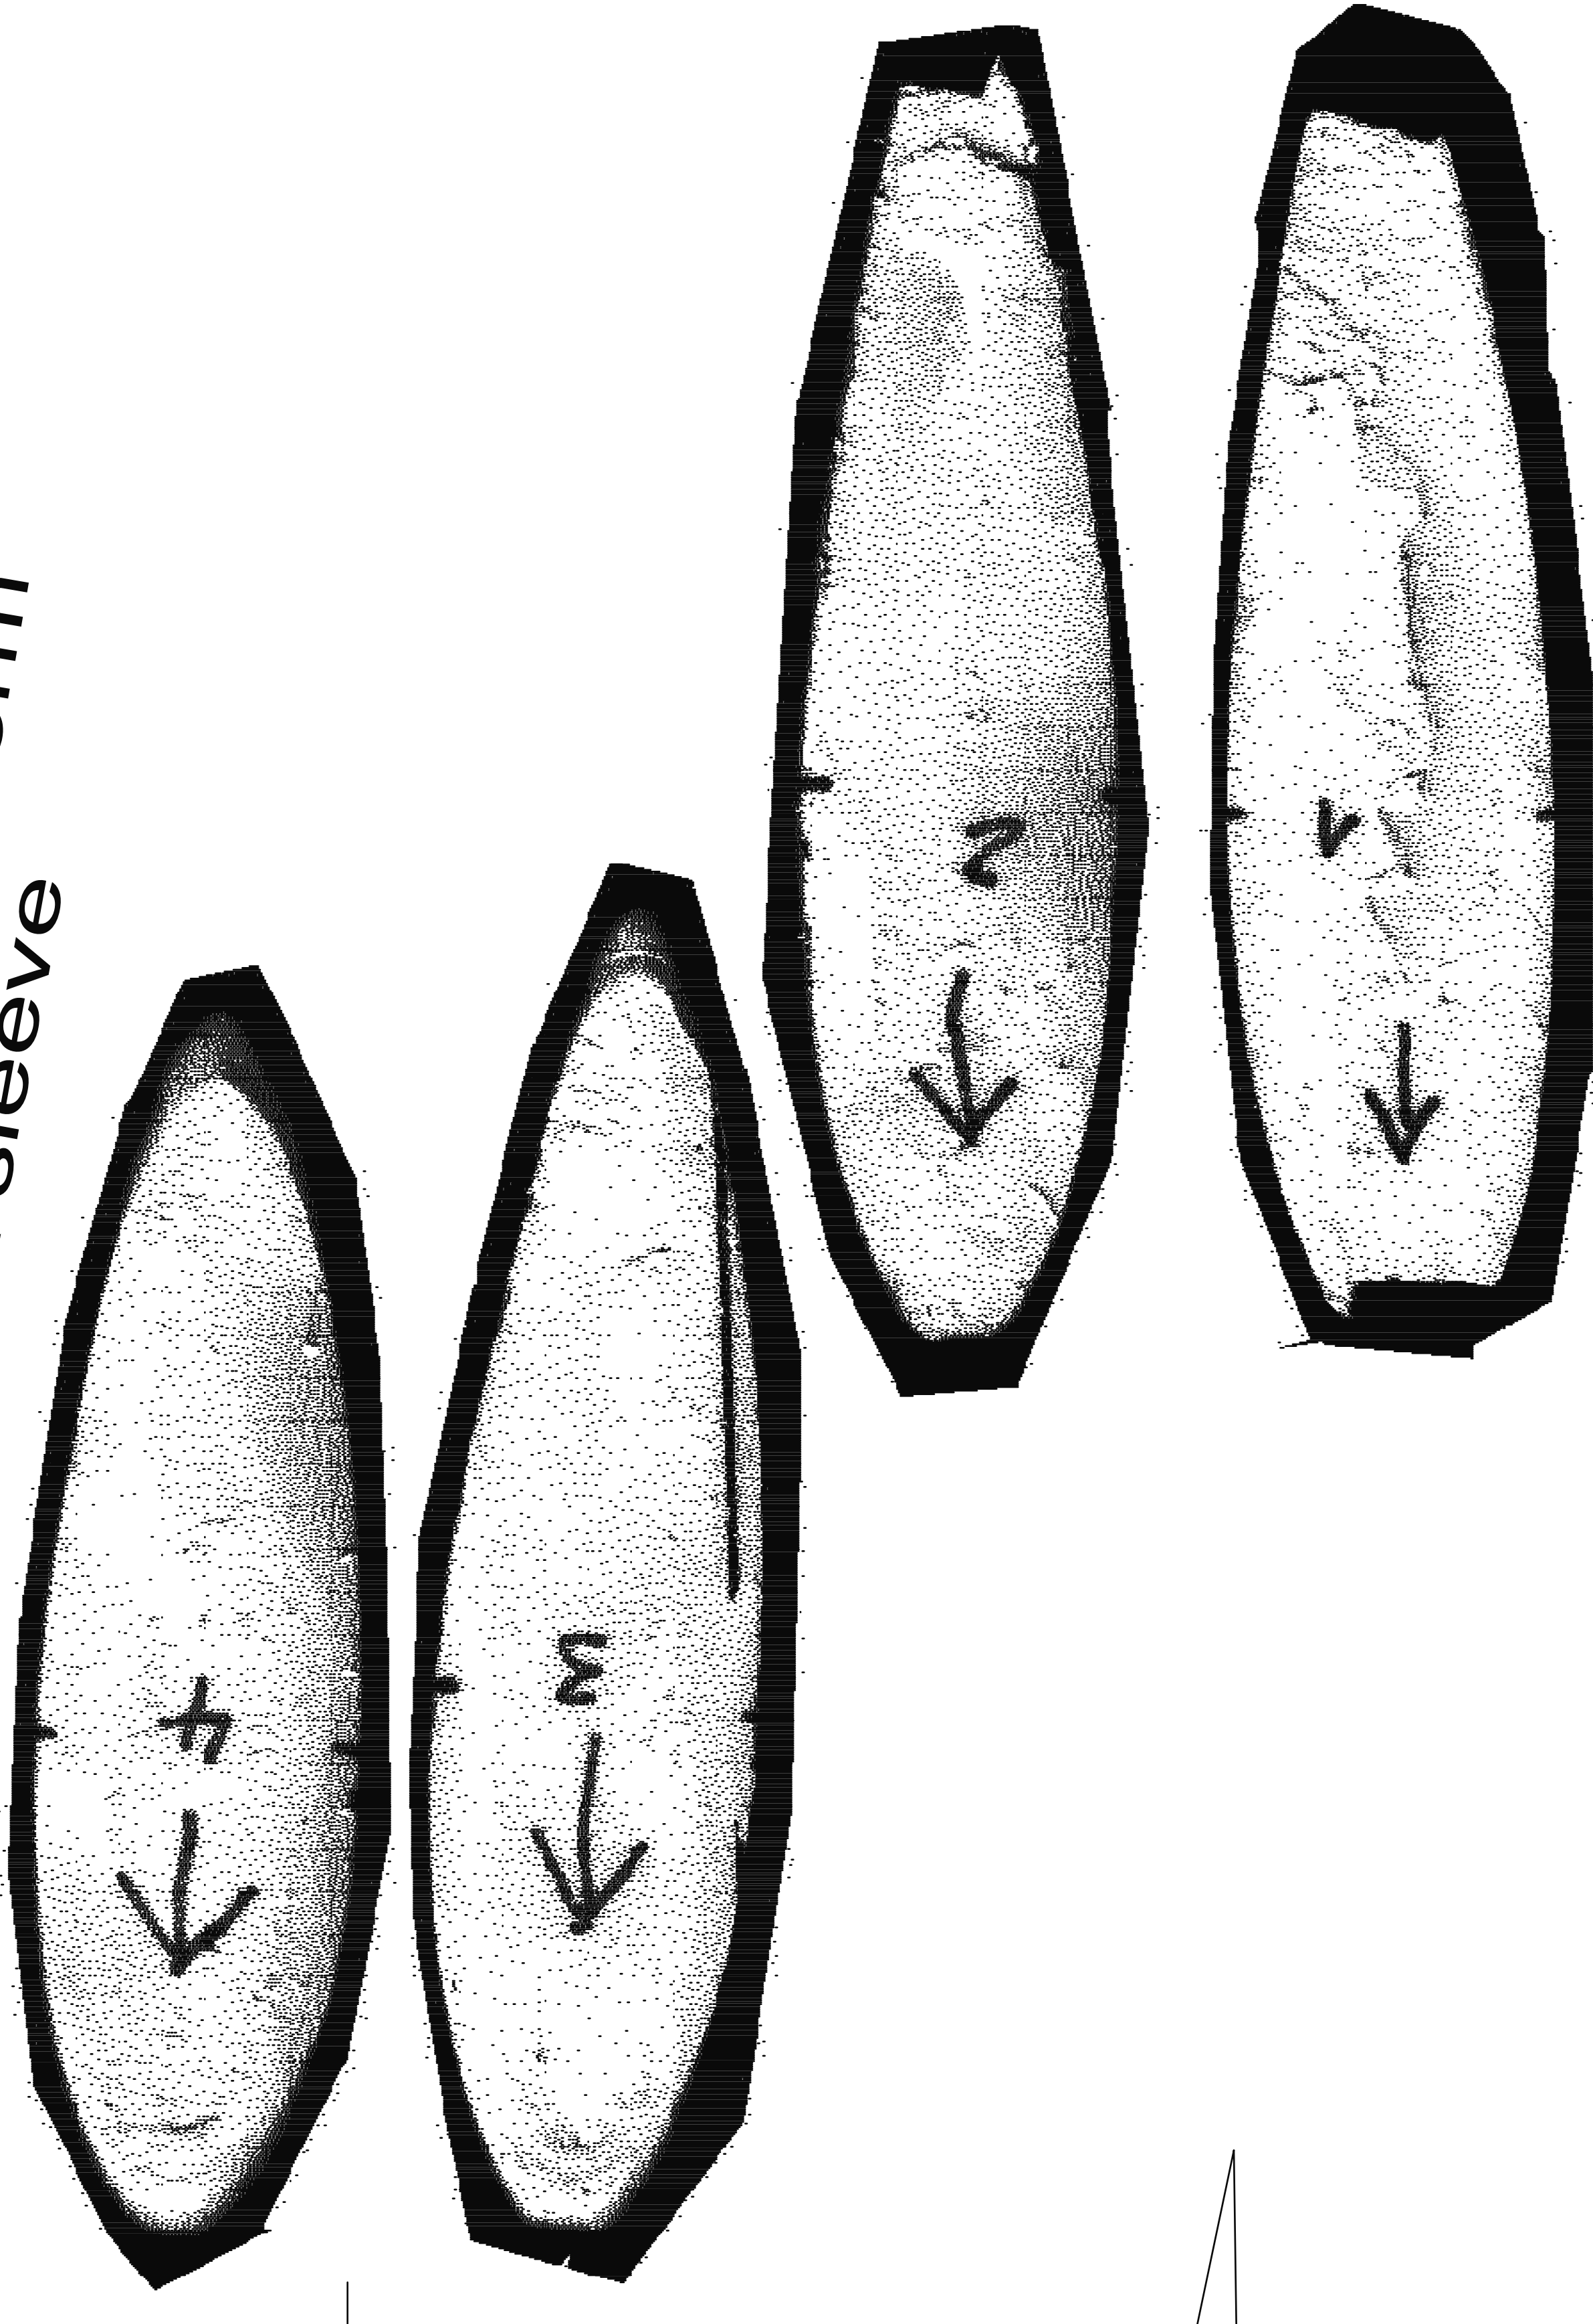

position s4

side profile, one part

6mm depron

cut in two parts
glue upper part first on wings

10 cm

cut later

position s2

position s1

position s3

wingplate

trim down to nose

s4

s1

s2

s3

F-16C Falcon Parkjet (c) by Hans-Joachim Walter 6mm depron former

Summer 2005, www.parkjets.com

